

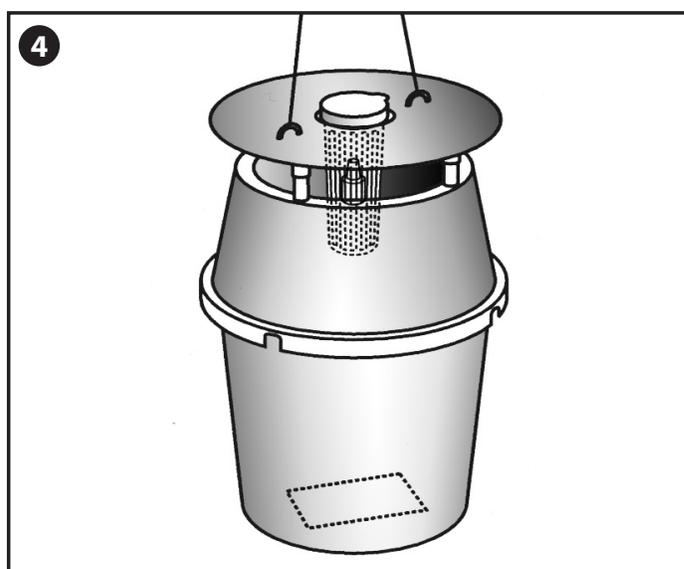
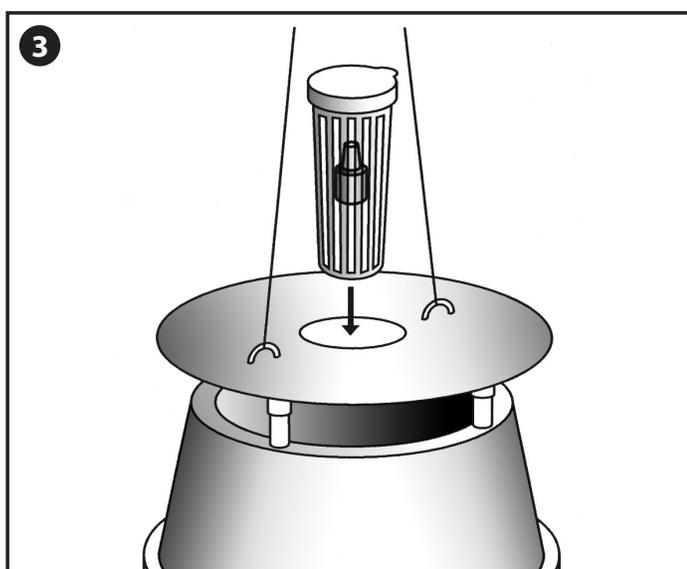


PHEROCON[®] BUCKET

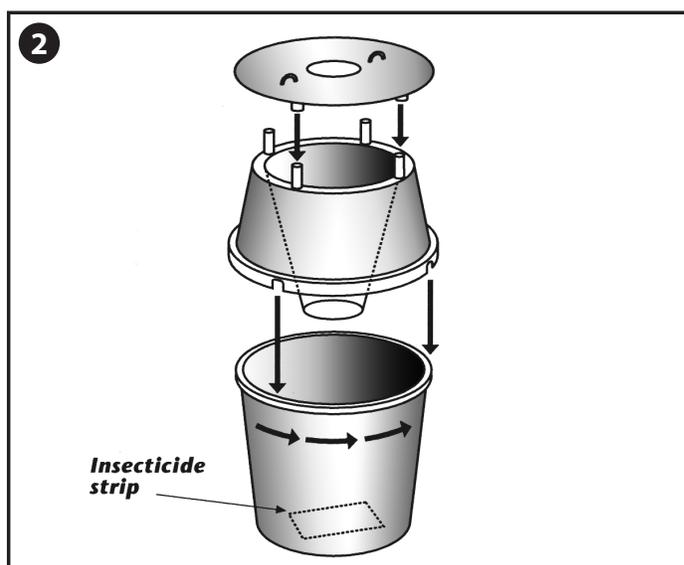

Assembly Instructions

- Remove components from carton. Each carton includes:
 - A. Trap top (lid)
 - B. Lure basket/cage
 - C. Trap funnel
 - D. Trap base/bucket
 - E. Wire hanger
- Assemble trap as illustrated. Join the trap top (lid) to the funnel and push down to secure. Attach the funnel section to the trap base (bucket) by twist-locking the pieces together.
- When this trap is used with a PHEROCON lure, place the lure inside the lure basket/cage and insert in the trap top/lid firmly to secure. PHEROCON lures are sold separately. When using an insecticide strip in this trap, place the strip in the bottom of the trap base/bucket. Insecticide strips are sold separately.
- Attach the wire hanger to the trap top/lid and hang from a tree branch, stake or metal trap stand.

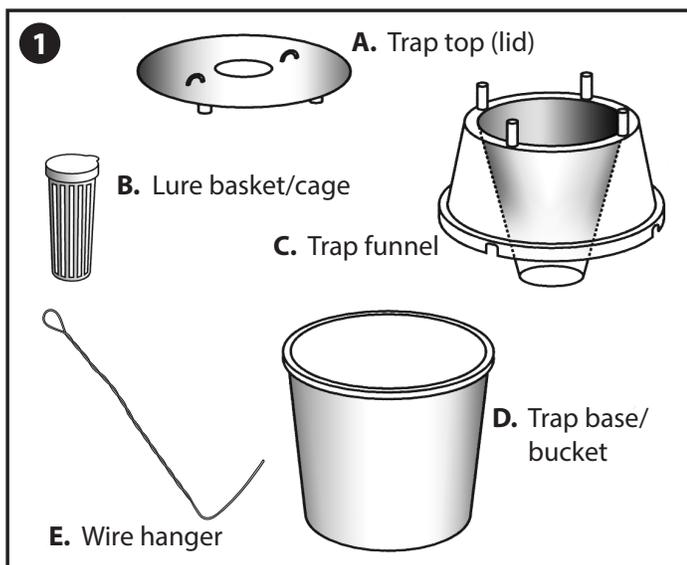

Please see Trécé's IPM Partner[®] Guidelines for further instructions.

Visit our website: www.trece.com or call 1-866-785-1313

© 2012 TRECE, Adair, OK USA

TRECE, PHEROCON, STORGARD and CIDETRAK are registered trademarks of Trécé, Inc., Adair, OK USA



INSECT PHEROMONE & KAIROMONE SYSTEMS

Your Edge – And Ours – Is Knowledge.